


3gCustomz Skid Plate Installation Guide

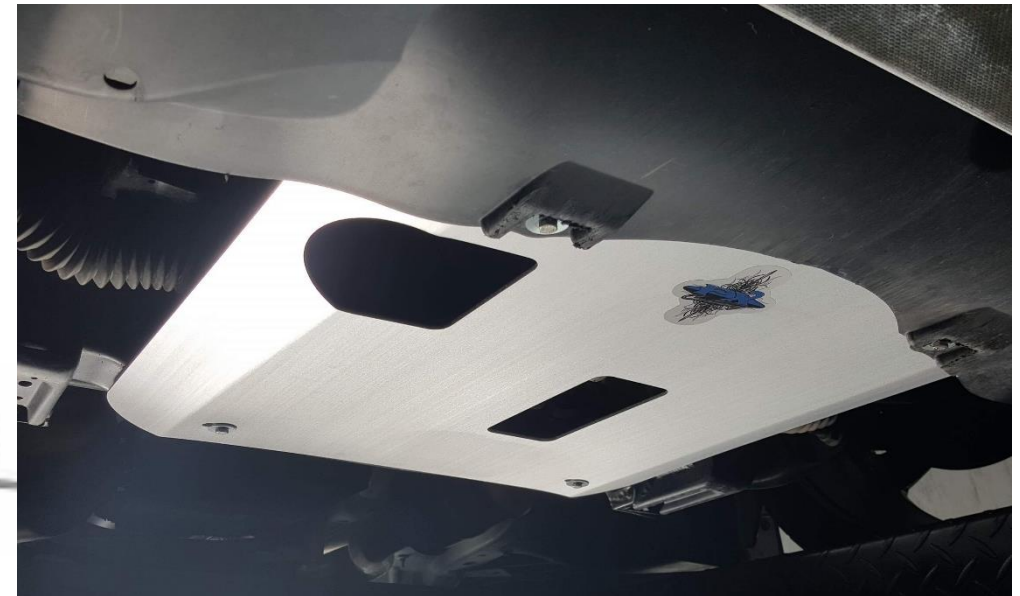

3gCustomz Skid Plate Installation Guide

Our Skid Plates are meant to install on the bottom of the engine cradle. If you have altered or damaged this area in any way then it is your responsibility to do a test fitment to confirm it will fit.

Every model and year will have some little differences therefore we strongly recommend that prior to prep and paint you install your Skid Plate and do a test fitment first. Make sure it fits correctly and there no interferences.

Be sure that you have proper clearance on the top, back, sides and bottom and nothing is rubbing.

Use all supplied hardware

While the amount of hardware and mounting location varies by model, these instructions are a general guide for the installation. Pictures may not represent your actual make/model and year.

DISCLAIMER: 3gCustomz LLC cannot control how this product is installed or used. By purchasing this product, the buyer/end user assumes all risks associated with its use and agrees to have the proper skills for its installation. 3gCustomz LLC and its suppliers will not be held responsible, liable or accountable for any injury, damage, loss, penalties, or fines that occur from using this product in any manner.



3gCustomz Skid Plate Guide

1. Remove OEM bolts and cover
2. Place Skid Plate against engine cradle.
3. Use Supplied Stainless Steel Bolts/Washers to the attach plate to OEM bolt locations
4. Be sure to use supplied lock washers
5. Tighten bolts and adjust plate as needed.
6. Throw away that plastic mess



* We suggest using Loctite on all nuts